

England's Stove Works, Inc.

Pellet, Corn, Gas and Wood Stoves

P.O. Box 206 Monroe, VA 24574

www.englishstoves.com

Phone: (800) 516-3636


Fax: (434) 929-4810

CHANGING THE THERMAL SENSOR WIRE

1. Unplug the unit and remove the rear access panel from the stove.
2. Remove the eyelet end of the thermal sensor wire from the stove rear wall (Illustration 1). It is held in place by one 5/16" screw. Let the eyelet and thermal sensor wire drop free into the stove.
3. Remove the thermal sensor wire from the control board by unplugging the plug end (Illustration 2). Discard the old thermal sensor wire.
4. Plug the new thermal sensor wire into the control board in the same place that the original wire was plugged.
5. Install the new thermal sensor eyelet onto the stove rear wall (Illustration 1). It is held in place by the 5/16" screw which was previously removed.
6. Replace the rear access panel.


*PLEASE NOTE these are generic instructions; please check your owner's manual and call Technical Support with any questions: (800) 245-6489.

Illustration 1

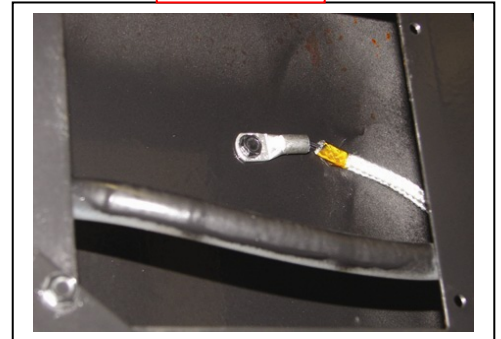

Eyelet end of thermal sensor wire

Illustration 2

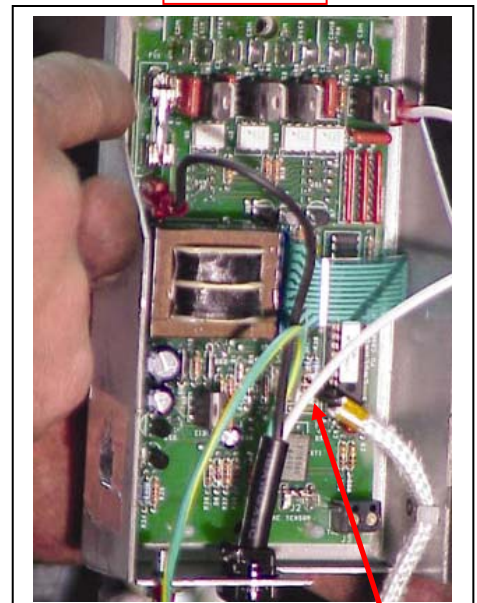

Thermal sensor wire placement on control board

ALWAYS FOLLOW ALL CODES

Technical Support: (800) 245-6489
Web Site: www.englishstoves.com