



*Pellet Stoves*  
*Wood Stoves*  
*Gas Stoves*  
*Multi-Fuel Stoves*

P.O. Box 206 Monroe, VA 24574 [www.englishstoves.com](http://www.englishstoves.com) Phone: (800) 516-3636 Fax: (434) 929-4810

## **Thermostat Mode (On/Off vs. High/Low Modes)**

For stoves with “CPM,” “EP,” “PAH” or “IP” in model number

**THERMOSTAT OPERATION:** This stove is equipped with a unique, new feature that allows two options for thermostatic operation: The stove comes from the factory pre-programmed in “On/Off mode,” which turns the stove on and off when the call for heat comes or leaves, like a furnace.

The second, or “High/Low mode,” burns at whichever heat range you set the stove at until the call for heat leaves, at which point the stove goes to the Low heat range setting.

To set the stove in the “High/Low mode,” unplug the unit and plug it back in, then press and hold both down arrows until H L appears in the heat range and blower speed windows. The unit is now in “High/Low mode.”

(Note: Repeat this to change back to “On/Off mode;” a 0 0 will appear in the heat range and blower speed windows.)

Using a thermostat in On/Off mode may shorten the life of your stove’s igniter.

*Note: For stoves with “CPM” or “EP” in the model number:*

Certain units may not respond to this; if your unit does not respond in this manner please contact Technical Support at (800) 245-6489.